

Sec. 138-208. - Separation of storm drainage and wastewater.

- (a) No person shall allow or permit any wastewater of any kind from his premises to enter any of the storm drains in the jurisdiction covered by this article, whether by surface drainage, pipes, or other means, nor shall storm drainage, that is, runoff from precipitation, be permitted to enter into the POTW.
- (b) No authorized person shall enter any sewer, pumping station, treatment plant or appurtenant facility in the jurisdiction covered by this article. No person shall maliciously, willfully, or negligently break, damage, destroy, deface, or tamper with any structure, appurtenance, or equipment which is part of the POTW.
- (c) No person other than an authorized representative of the POTW or the control authority shall operate or change the operation of any sewer, pumping station, treatment plan, outfall structure or appurtenant facility in the jurisdiction of the control authority.

(Code 1969, § 29-118; Ord. No. 94-09, § 2.8, 3-28-1994)